



9840 Windmill Road, Bldg. 200, Houston, TX 77064 Email: Hendrix5@peoplepc.com Phone: 713-466-6888

INSTALLATION, MAINTENANCE, AND SPARE PARTS LIST

PRODUCT

Temporary Strainers, Model **TC, TCMI, TCMO, TB, TBMI, TBMO, TFP, TFPM, TFM.**
This specification covers recommended procedure for the installation and maintenance of temporary strainers.

INSTALLATION:

Insert temporary strainer between two (2) flanges of the proper size. The cone and/or basket strainer should always be inserted so the flow goes into the fine wire mesh (If equipped). When there is no mesh and only perforated material, it may be inserted for the flow in either direction. When inserting the cone and/or basket strainer between the flanges, a gasket should be placed on both sides of the strainer

MAINTENANCE:

These items are intended for start-up purposes only. During initial operations, line debris may quickly accumulate in the strainer. Should pressure drop across the strainer exceed 5 PSI, the operations should cease and strainer should be cleaned. This procedure should be repeated as often as required. When no further debris (Weld scale, rust, etc.) are found, the strainer should be removed.

SPARE PARTS:

None Required.